

SR-151 – May 22, 2020

Topic: Approval to fit the eqss OverWatch™ system onto Skyjack DC Scissors

Applicable units: SJIII DC Scissors certified to AS 1418.10 standard, with serial numbers:

<u>Model</u>	<u>Serial Break</u>		
SJIII 3215	10 000 996	to	10 099 999
SJIII 3219	22 057 772	to	22 199 999
SJIII 3220	60 004 189	to	60 099 999
SJIII 3226	27 017 551	to	27 099 999
SJIII 46XX	70 017 596	to	70 199 999
SJIII 4740	70 200 001	to	70 299 999


WARNING!

Failure to comply with all restrictions, instructions and warnings contained in this letter, the machine Operating Manual and the eqss Operating Instructions, could result in death or serious injury.

This letter serves as written approval to install the eqss OverWatch™ system on to Skyjack scissor lift models listed above, provided that the following criteria are strictly adhered to.

References:

1. EQSS Model6253 Overwatch™ Installation Manual: DO001197 Rev 3.3.
2. EQSS Model6253 Overwatch™ User Manual: DO001195 Rev 1.7 or later.
3. Skyjack Operation Manuals available with the machine and online at www.skyjack.com

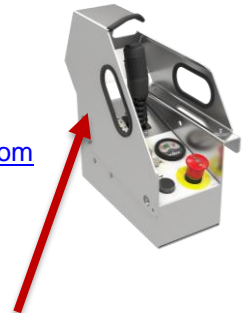

Installation Requirements:

- The Skyjack DC Scissor control box must be fitted with the Skyjack Control Box Guard (Skyjack Part Number 161240).
- Installation of OverWatch™, including the 7.5° positioning wedge (eqss Part Number ME001798), must be completed in accordance with the installation instructions provided with the OverWatch™ System (Ref.1).
- Installation test and configuration set-up must be completed on first installation.
- OEM settings must **not** be modified.

This Document expires 5 years from the date of issue.

Page 1 of 2

Skyjack Inc.

Skyjack Plant 2
201 Woodlawn Road W
Guelph, Ontario, Canada N1H 1B8
Tel: 519 837 0888
Fax: 519 341 8827
www.skyjack.com



- OverWatch™ may be installed with Skyjack Secondary Guarding Lift Enable (SGLE).
- OverWatch™ may be used with all Skyjack approved options and modifications unless expressly prohibited by the modification.

User Requirements:

- The use of OverWatch™ is an aide and does not replace the need for operator awareness and suitable jobsite diligence and safe working practices.
- The Skyjack MEWP pre-use inspections and checks should be carried out as normal (Ref. 3)
- In addition, the operator must complete the Pre-operational Checks and use the OverWatch™ system as described in the OverWatch™ User Manual (Ref. 2).
- Note: When using the platform control console from the ground, the controller should be held steady to avoid unnecessary cutout.

Owner Requirements:

- Servicing and Inspection must be carried out in accordance with the instructions provided in the OverWatch™ user manual (Ref.2).
 - a. Diagnostic information is available by accessing the system wifi. Service instructions to access this information and the inspection and maintenance instructions are available in the user manual.

General Criteria:

- A copy of this letter must accompany the Skyjack scissor lift operator's manual at all times in the weather resistant storage compartment located on the machine.
- A copy of the eqss OverWatch™ User Manual (Ref. 2) must accompany the Skyjack scissor lift operator's manual at all times in the weather resistant storage compartment located on the machine.
- Machine owners must maintain a copy of the Installation Manual for reference.
- No modifications to the Skyjack scissor lift or OverWatch™ system are permitted outside the approval criteria contained within this letter.

Skyjack assumes no liability or responsibility for any and all incidents involving personal injury, property damage, or equipment damage which may occur from improper use of the Skyjack scissor lift, or from the incorrect installation and use of the eqss OverWatch™ system.

Issued by **Skyjack Product Safety**