

I N S T A L L M A N U A L

EQSS Model6253 – OverWatch™ Haulotte Compact DX Pre 2010



**** Failure to follow this installation manual will void warranty ****



REV 1.3

28/11/2023

Model6253 OverWatch™ Installation Manual

Document # DO001522

AUTHORS:

Kieren Grogan, Bhavani Kacharapu

AUTHORISED BY:

Kieren Grogan

CHECKED BY:

Andrew Donegan

DOCUMENT ABSTRACT:

This manual details the installation instructions for installing the Model6253 OverWatch on a Haulotte Compact DX (Pre 2010) Rough Terrain scissor lift.

PRODUCT NAME:

Model6253 OverWatch Operator Detection System

REFERENCE DOCUMENTS:

DO0001195 Model6253 OverWatch User Manual

CURRENT DOCUMENT REVISION:

1.3

REVISION INFORMATION:

- 1.0 Initial Document Creation for installation on a Haulotte Compact DX Rough Terrain Scissor
- 1.1 Update of installation manual and instructions for plug and play installation
- 1.2 Inclusion of sensor guard V2
- 1.3 Update to model configuration instructions

Important Information

Information contained in this publication regarding this device's applications and the like, is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that the application or our equipment meets with your specifications.

EQUIPMENT SAFETY SYSTEMS MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING, BUT NOT LIMITED TO, IT'S CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE.

Equipment Safety Systems disclaims all liability arising from this information and its use. Use of Equipment Safety Systems' products as critical components in life support systems is not authorised except with express written approval by Equipment Safety Systems. No licenses are conveyed, implicitly or otherwise, under any Equipment Safety Systems intellectual property rights.



N23041

This is a class A product certified to AS/NZS CISPR 22:2006. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



Table of Contents

Preparation	5
Required Tools	5
Installation Time	5
Installation Instructions	6
Operator Sensor	6
Control Module	10
Post Installation Configuration	15
Overview	15
Minimum system requirements	15
Wi-Fi Connection & Web Page Access	15
Machine Model Selection	16
Installation Test.....	17
Change Model Configuration	18
System Settings.....	19
Default Parameters	19
Polarity and Input Style.....	20
Replacement Parts.....	22

Preparation

Required Tools

The OverWatch has been designed to be fitted using basic workshop tools. Shown below is a list of tools required to complete the installation.

Item	Tool / Description
1	Electric Drill
2	Centre punch
3	Hammer
4	Side Cutters
5	Drill 5.0mm
6	Drill 6.0mm
7	Metric sockets or spanners
8	Needle nose pliers
9	Screw drivers



Installation Time

The suggested time required to install the OverWatch is as detailed below.

Task	Estimated Time (Minutes)
Open the operator control box	1
Drilling of all mounting holes for the various components	13
Mechanical assembly	10
Electrical assembly	10
Post installation system tests	10
Close the operator control box	1
Total	45

Installation Instructions

Operator Sensor

Step	Description	Diagram
1.	Remove the control box from the metal housing.	
2.	<p>Drill two 5.2mm holes to mount the operator sensor L bracket as shown in the image.</p> <p>Hole 1 - 75mm from the top edge.</p> <p>Hole 2 - 98mm from the top edge</p>	

3.

**Sensor Mounting Guard V1
(ME001794)**

Mount the operator sensor in the **45-degree position** by using the sensor guard, bolts, and washers.



PARTS LIST

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	AS001910	Overwatch™ Operator Sensor
2	1	ME001794	Overwatch™ Sensor Guard
3	2	FA001417	M4 x 12mm Butt screw
4	2	FA001235	Washer, Plain, M4, 304 St. St.
5	1	ME001818	Operator Sensor Mounting Bracket

4.


**Sensor Mounting Guard V2
(AS002326)**

This guard (AS002326) supersedes the original V1 design.

Mount the operator sensor in the **45-degree position** on the mounting bracket using the supplied M5 washers and nuts. Make sure that the sensor is on the 0.0-degree angle, such that it is **not** twisted away from the joystick.

The 0.0-degree angle is achieved by using the bolt hole as show in the image.

PARTS LIST			
ITEM	QTY	STOCK NUMBER	DESCRIPTION
1	1	AS002326	Sensor Mounting Guard V2
2	1	AS001910	OverWatch Operator Sensor
3	2	FA001174	Washer, Plain, M5, 304 St. St.
4	2	FA001219	Nut, Hex, M5 x 0.8mm, Nylock

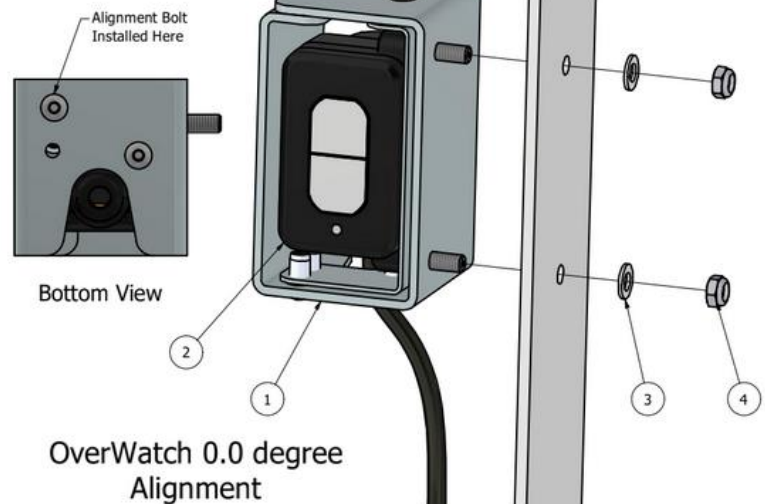

5. Mount the operator sensor L bracket to the control box using the supplied nuts, bolts and washers.

Use the following hardware from the kit.


2 x M4 x 12mm Button Head Screws

2 x M4 Lock Nuts

4 x M4 Washers



6. Remove the bottom of the joystick control to expose the internals.

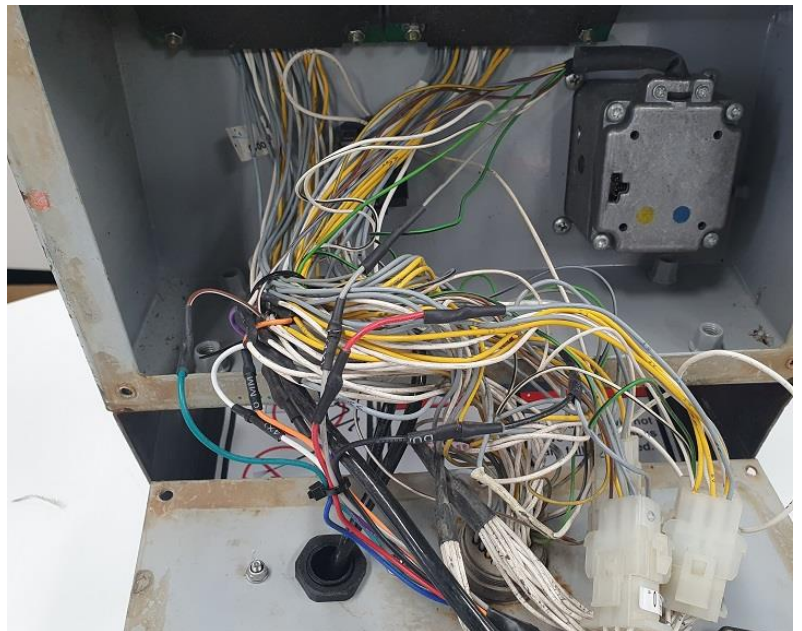


7.

Cable Gland Installation

Drill a **20mm** hole on the back of the control box as shown in the image.

Horizontal distance from the side edge to the centre of the hole is **100mm**.

Vertical distance from the top edge to the centre of the hole is **50mm**.

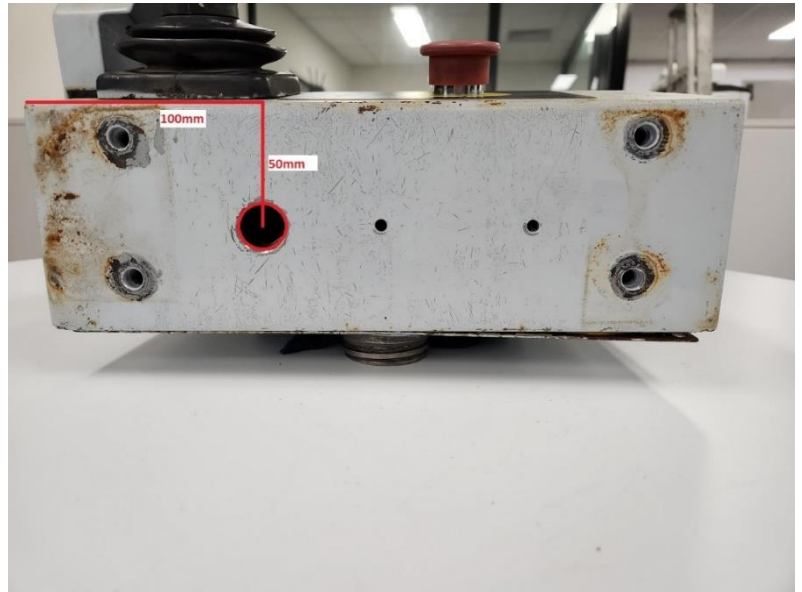

8.


ECU Module Installation

Drill two **5mm** holes spaced **65mm** apart to install the ECU.



Horizontal distance from the side edge to the centre of the hole 1 is 150mm.

Vertical distance from the top edge to the centre of the hole 1 and hole 2 is 50mm.

Distance between the two holes is 65mm.

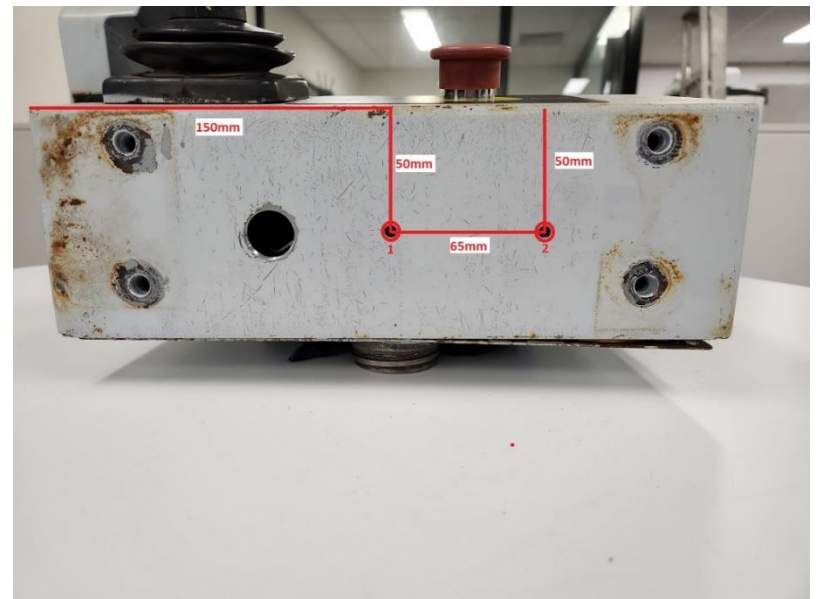


Control Module

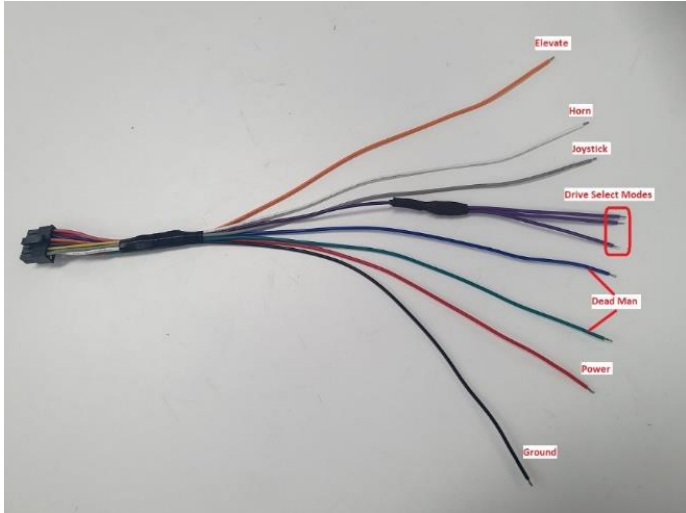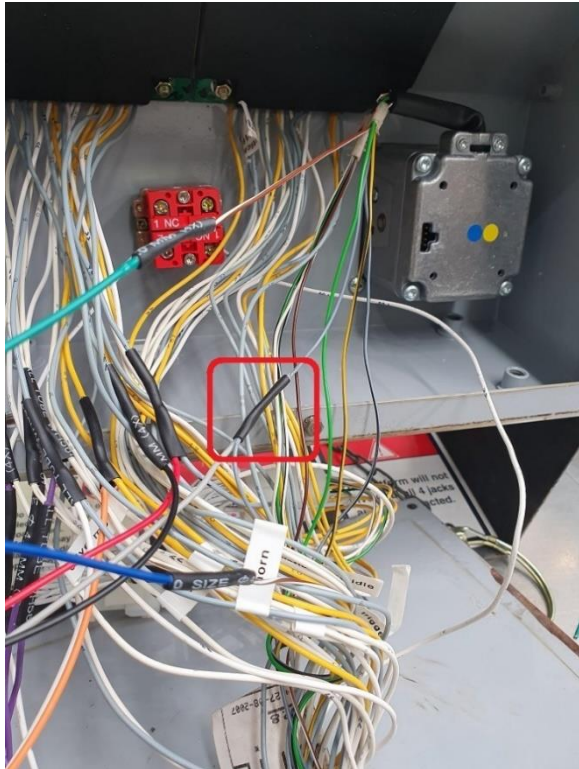Step	Description	Diagram
1.	Wiring connections are made with the AS002252 harness.	
2.	Joystick Connection: Splice the Grey wire from the OverWatch harness into the Grey wire from the joystick control as shown in the image.	

3.

Drive Select Connection:


Splice three purple wires from the OverWatch harness into the white wires numbered as **2, 5, and 8**.

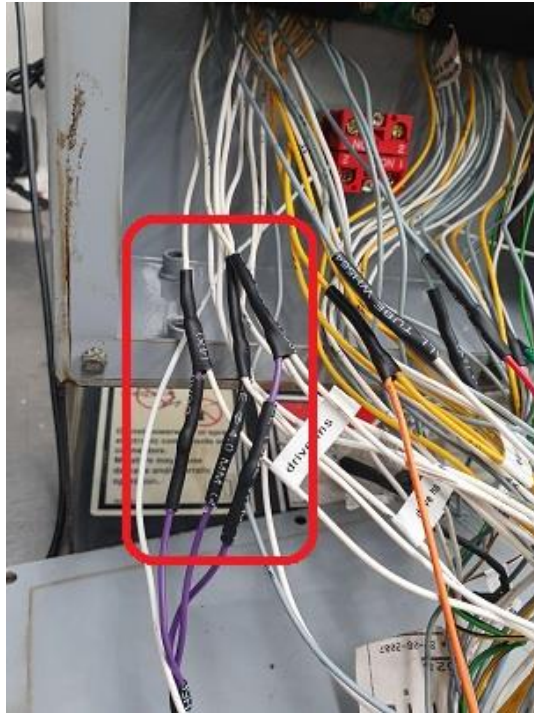

4.

Horn Connection:

Splice the white wire from the OverWatch harness into the white wire numbered as **9** from the platform machine control box.

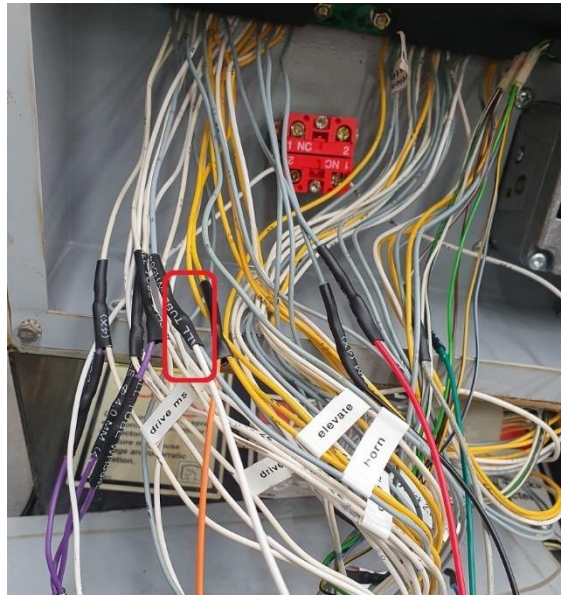


5.

Deadman Connection:

Cut the white/brown wire from the joystick.

Solder the green wire from the OverWatch harness to the white/brown wire from the joystick side.


Solder the other end of the white/brown wire from the circuit board side to the blue wire from the OverWatch harness.


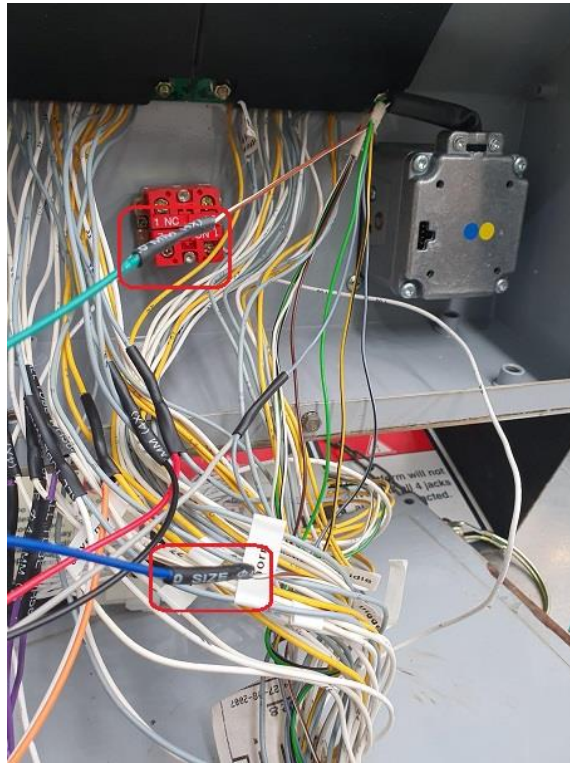




6.

Elevate Connection:

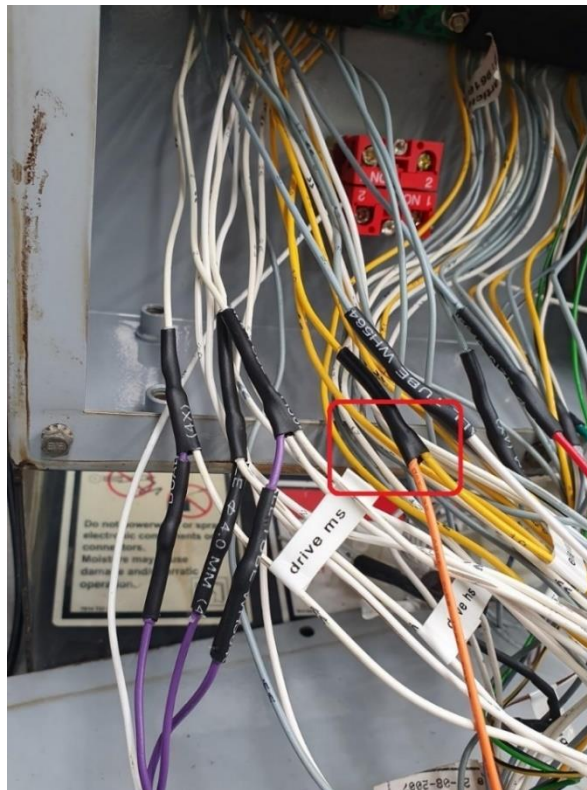Splice the orange wire from the OverWatch harness into the yellow wire numbered as **10** from the platform machine control box.

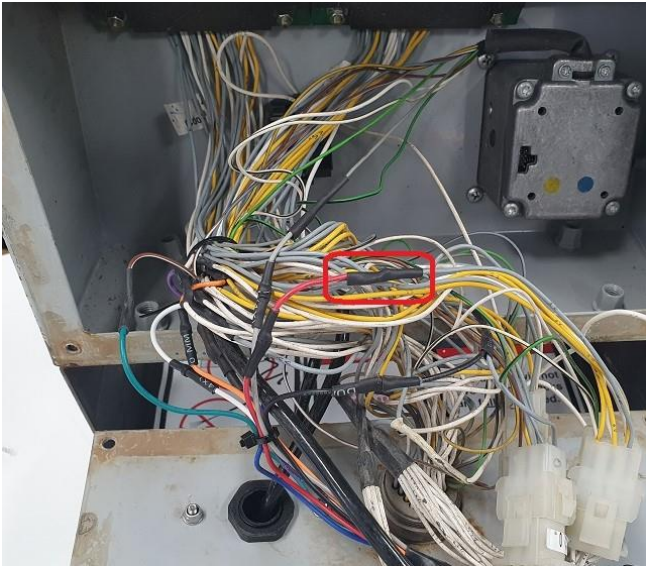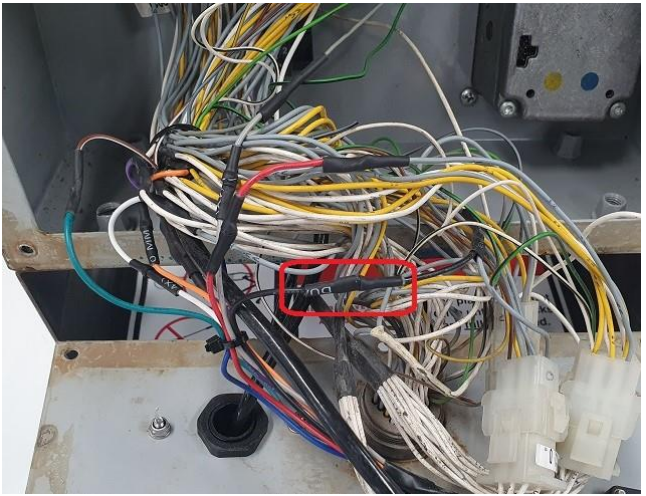

7.	<p>Power Connection:</p> <p>Splice the red wire from the OverWatch harness into the grey wire from pin 3 of the connector 211.</p>	
8.	<p>Ground Connection:</p> <p>Splice the black wire from the OverWatch harness into the grey wire from pin 4 of the connector 0.</p>	
9.	<p>Mount the ECU module inside the control box by using the supplied M4 bolts and washers.</p> <p>Connect the 8-pin connector from the Operator Sensor, and the 12-pin connector from the OverWatch harness into the ECU.</p>	

10.	<p>Make sure the operator sensor cable runs clear and tighten the M20 gland to seal the cable entry point as shown in the image.</p>	
11.	<p>Re-assemble the control box. While the E-Stop is pushed in there should not be power into the OverWatch system.</p> <p>If the OverWatch remains powered swap to the connection to the other side of the E-Stop.</p> <p>Care must be taken when closing the box, make sure all internal wires are clear of the box edges and bolt inserts, do not pinch or crush any internal wires when closing the boxes.</p>	

Post Installation Configuration

Overview

After the system has been installed it must be configured with the parameters to suit the machine. Follow the instructions below to configure the OverWatch.

Minimum system requirements

Any smart phone, tablet or laptop that meets the following requirements:

- The device can connect to a Wi-Fi access point
- The device has an up to date web browser installed. Firefox, Chrome or Safari are recommended.

Wi-Fi Connection & Web Page Access

To enable the Wi-Fi connection on the OverWatch to complete the configuration follow the steps below.


1. Power down the platform control box with the ESTOP
2. Wait 5 seconds
3. Power up the platform control box with the ESTOP
4. While standing **in front of the operator sensor**, switch on the OverWatch
5. As the welcome chime starts to play, cover the sensor. The LED will flash white then black to acknowledge.
6. Remove your hand from the sensor. The LED will flash white then black to acknowledge.
7. After covering then uncovering the sensor this way 2 more times, "Wi-Fi On" will be announced
8. On your Wi-Fi enabled device (laptop, tablet, smartphone, etc), show the available wireless networks
9. Select the wireless network (starts with "overwatch") to connect to the OverWatch
10. When prompted, enter the **password 12345678**
11. Open your preferred web browser (Chrome, Firefox, Safari)

Enter the following into the address bar <http://192.168.4.1> to open the OverWatch main page

Machine Model Selection

Follow the instructions below to configure the OverWatch.

1. Select the Setup option
2. If there is a password field at the bottom of the page, follow the instructions in Change Model Configuration to obtain the password and enter the password field
3. Select the EWP Model from the drop-down list and click Set
4. Click on Proceed to test to begin the installation test

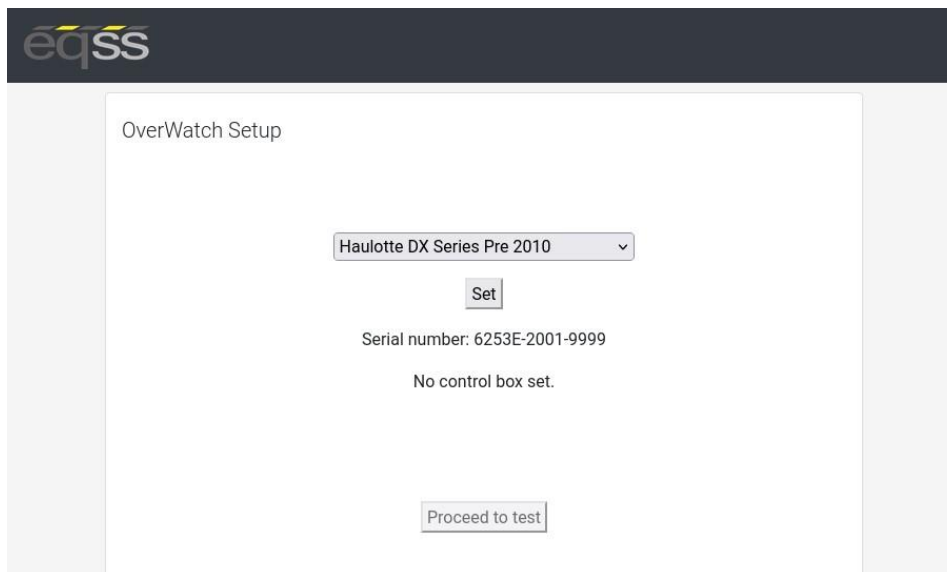

OverWatch Setup

Haulotte DX Series Pre 2010 ▼

Set


Serial number: 6253E-2001-9999

No control box set.

Proceed to test

Installation Test

After the model configuration has been set or updated an Installation Test must be performed. This will ensure the installation has been correctly performed and the OverWatch is functioning correctly. Follow the instructions on the web page to complete the Installation Test.

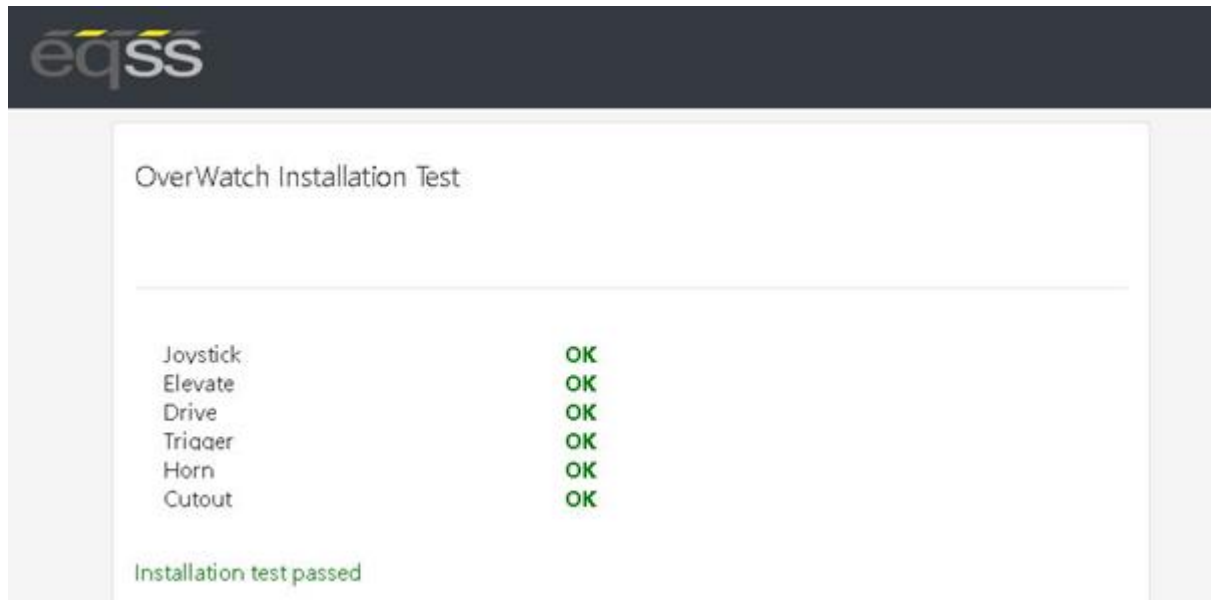


Change Model Configuration

To reconfigure the OverWatch for a different model requires an authorisation password. The authorisation password is generated from the EQSS website. The EQSS website requires a login username and password, contact EQSS for these details.

Follow the instructions below to obtain an authorisation password. It is important to note that each ECU has a unique serial number and a unique password.

1. Open your web browser and enter the following into the address bar <http://www.eqss.com.au/overwatch> to open the Login page
2. Enter your username and password
3. Enter the EUC serial number which is shown on the setup page or on the ECU serial number sticker, also enter the owner and model details of the EWP and then click Generate Hash
4. The generated Hash code or password can be used to change the model configuration.

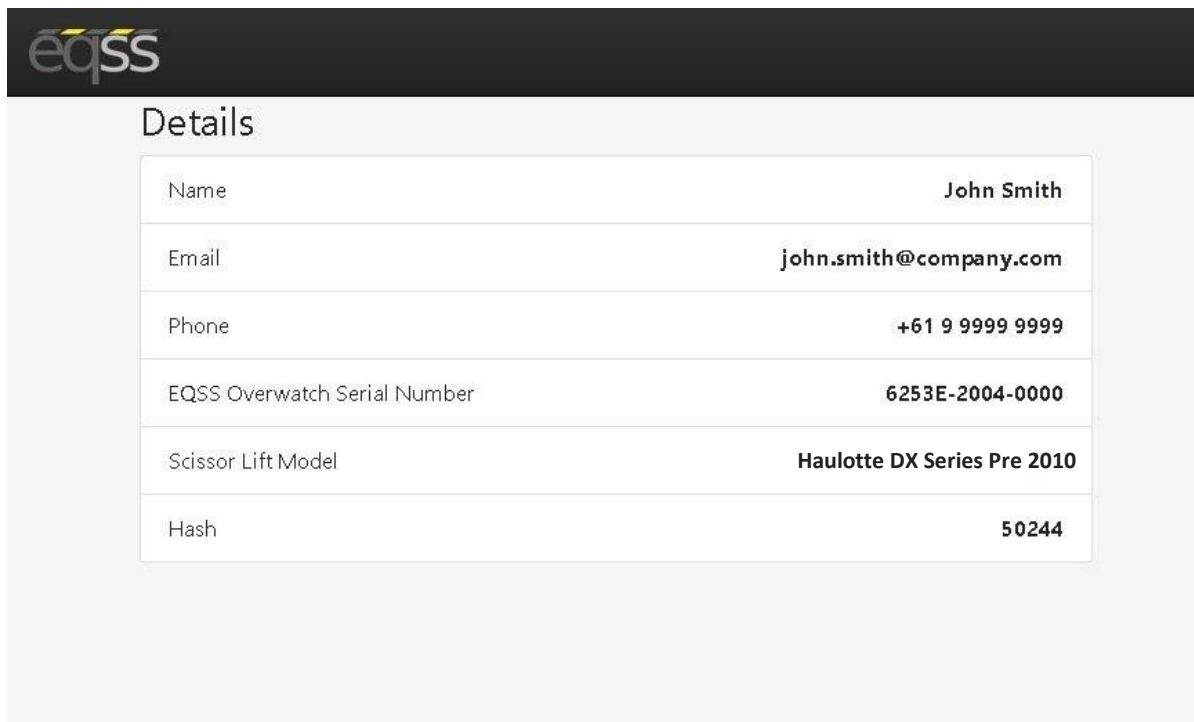

The screenshot shows the 'Details' section of the EQSS website. It features a table with the following information:

Name	John Smith
Email	john.smith@company.com
Phone	+61 9 9999 9999
EQSS Overwatch Serial Number	6253E-2004-0000
Scissor Lift Model	Haulotte DX Series Pre 2010
Hash	50244

System Settings

Default Parameters

The OverWatch is configured with the following default parameters.


Setting Name	Description	Default
max_safe_velocity	This is the velocity threshold for the cutout in cm/s for drive mode.	95
max_safe_displacement	This is the maximum permitted distance in cm the operator may be away from the calibration position in drive mode.	50
max_safe_velocity_elevate	This is the velocity threshold for the cutout in cm/s for elevate mode.	75
max_safe_displacement_elevate	This is the maximum permitted distance in cm the operator may be away from the calibration position in elevate mode.	50
fwddispadj	The proportion of the calibration distance toward the sensor permitted to the operator.	0.65
fwdveloadj	The coefficient to apply to the maximum allowable velocity when the movement of the operator is toward the sensor.	1.0
zone_obstruction	If the lidar sensor reading is below this, the lidar is considered to be obstructed (with paint or thick coat of dust) and the system is cutout until the obstruction is cleared.	5
zone_minimum	The minimum calibration distance. If the operator is closer to the sensor than this "operator zone" will be announced.	30
zone_maximum	The maximum calibration distance. If the operator is further from the sensor than this "operator zone" will be announced.	120
adc_elevate_threshold	Threshold value for the elevate ADC input.	1100
adc_drive_threshold	Threshold value for the drive ADC input.	1100
adc_trigger_threshold	Threshold value for the trigger ADC input.	1100
adc_joystick_fwd_threshold	Forward threshold value for the joystick ADC input.	1550
adc_joystick_bwd_threshold	Backward threshold value for the joystick ADC input.	1350
throttle_time	Period after the trigger is pressed (ms) during which initial velocity reading is computed.	500
driving_state_timeout	Mode selection switch timeout (ms)	12000

Polarity and Input Style

The table below describes each setting

Setting Name	Description	Default
joystick_drive_forward	Direction of joystick to move machine forward	forward
joystick_elevate_upward	Direction of joystick to move machine upwards	forward
elevate_polarity	Direction of signal logic	high
drive_polarity	Direction of signal logic	high
trigger_polarity	Direction of signal logic	high
joystick_polarity	Direction of signal logic	high
driving_state_input	Direct or timer based	direct

Harness Drawing AS002252

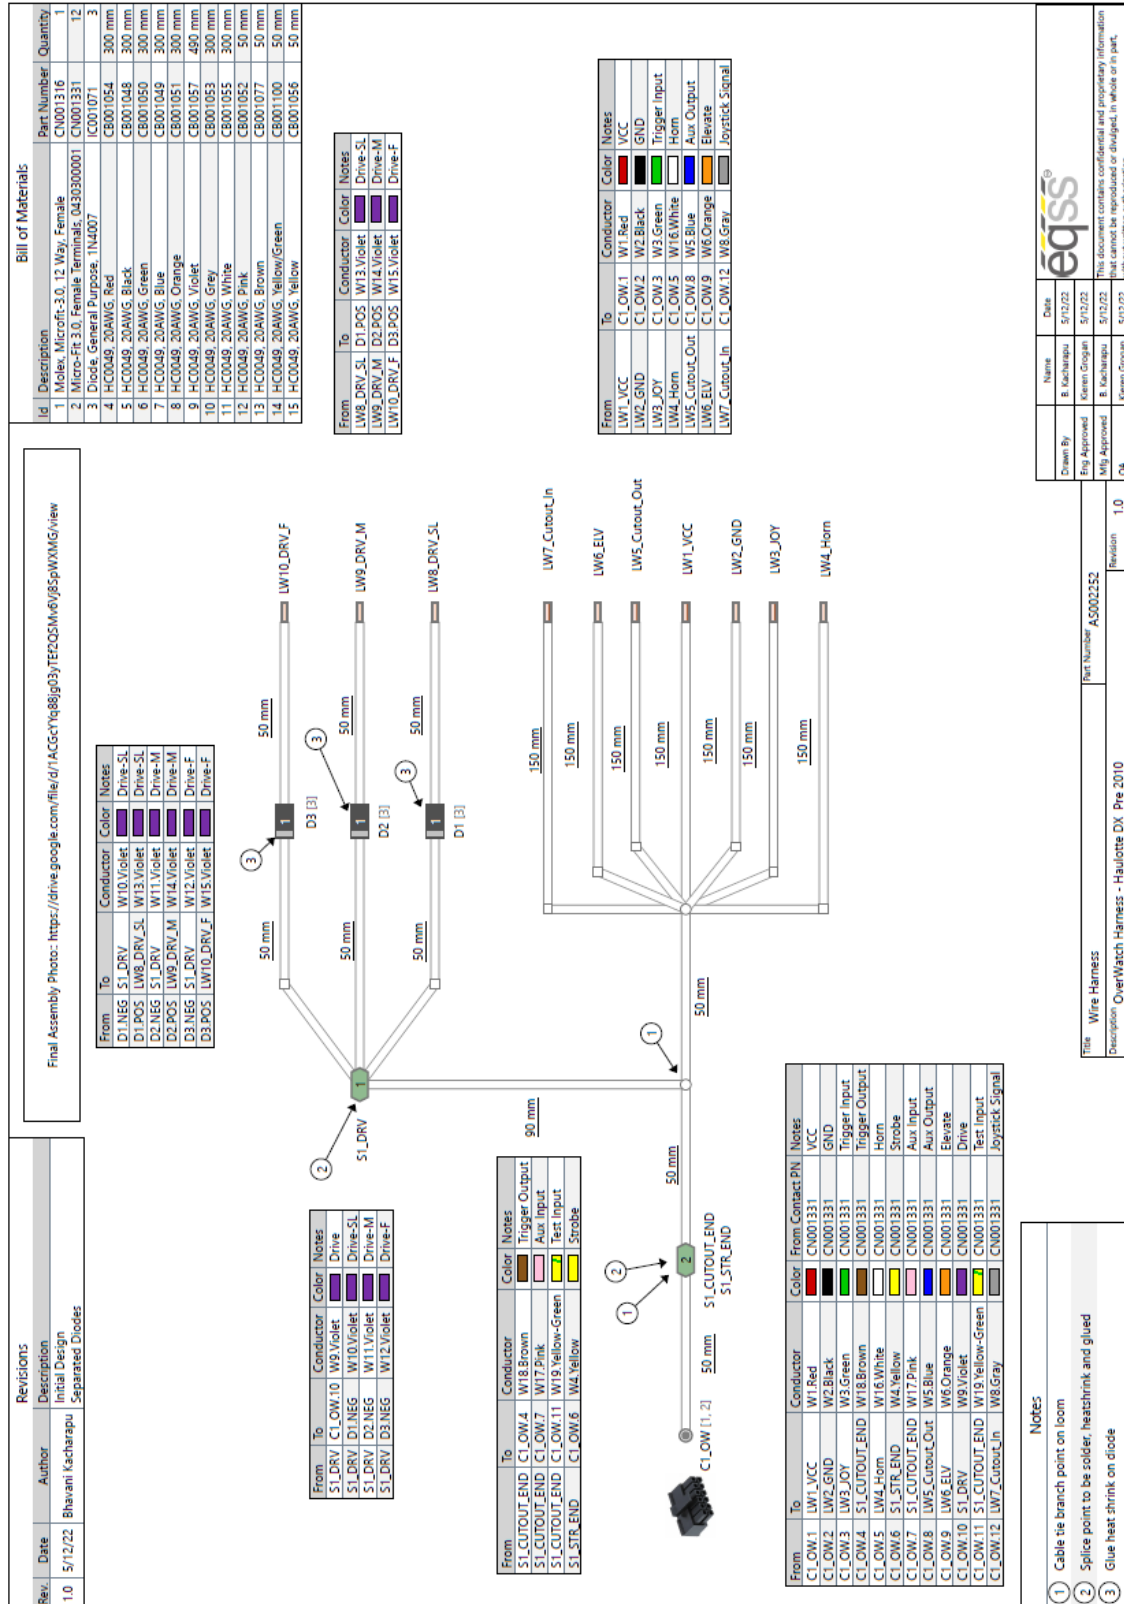

Replacement Parts

Replacement parts for this OverWatch kit are available from EQSS, please email sales@eqss.com.au

Shown below are the part numbers for the major components included in this model specific kit.

Part Number	Description
AS002554	OverWatch - Complete kit for Haulotte DX (Pre2010) Series
AS001910	OverWatch - Operator Sensor with M20 gland
AS001916	OverWatch – Electronic Control Unit (ECU)
AS002252	OverWatch – Haulotte DX (Pre2010) Harness
AS002326	OverWatch - Sensor Guard V2
ME001818	OverWatch – L Bracket 30/45