

I
N
S
T
A
L
L

M
A
N
U
A
L

EQSS Model6253 – OverWatch™ JLG Mxx69LE Series



**** Failure to follow this installation manual will void warranty ****



REV 1.2

19/01/2024

Model6253 OverWatch™ Installation Manual

Document # DO001625

AUTHORS:

Kieren Grogan, Bhavani Kacharapu

AUTHORISED BY:

Kieren Grogan

CHECKED BY:

Kieren Grogan

DOCUMENT ABSTRACT:

This Installation Manual details the manufacturer's installation instructions for installing the Model6253 OverWatch on a JLG Mxx69LE Series, Rough Terrain Scissor Lift.

PRODUCT NAME:

Model6253 OverWatch Operator Detection System

REFERENCE DOCUMENTS:

DO001195 Model6253 OverWatch - User Manual

CURRENT DOCUMENT REVISION:

1.2

REVISION INFORMATION:

- 1.0 Initial Document Creation for installation on a JLG Mxx69LE Series
- 1.1 Update of installation manual and instructions for harness installation
- 1.2 Inclusion of sensor guard V2 and update of machine configuration instructions

Important Information

Information contained in this publication regarding this device's applications and the like, is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that the application or our equipment meets with your specifications.

EQUIPMENT SAFETY SYSTEMS MAKE NO REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING, BUT NOT LIMITED TO, IT'S CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE.

Equipment Safety Systems disclaims all liability arising from this information and its use. Use of Equipment Safety Systems' products as critical components in life support systems is not authorised except with express written approval by Equipment Safety Systems. No licenses are conveyed, implicitly or otherwise, under any Equipment Safety Systems intellectual property rights.



N23041

This is a class A product certified to AS/NZS CISPR 22:2006. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



Table of Contents

Preparation	5
Required Tools	5
Installation Time	5
Installation Instructions	6
Operator Sensor	6
Control Module	11
Post Installation Configuration	16
Overview	16
Minimum system requirements	16
Wi-Fi Connection & Web Page Access	16
Machine Model Selection	17
Installation Test.....	18
Change Model Configuration	19
System Settings.....	20
Default Parameters	20
Polarity and Input Style.....	21
Harness Drawing AS002318.....	22
Replacement Parts.....	23

Preparation

Required Tools

The OverWatch has been designed to be fitted using basic workshop tools. Shown below is a list of tools required to complete the installation

Item	Tool / Description
1	Electric Drill
2	Centre punch
3	Hammer
4	Side Cutters
5	Drill 3.2mm
6	Drill 5.0mm
7	Metric sockets or spanners
8	Needle nose pliers
9	Screw drivers
10	Soldering Iron


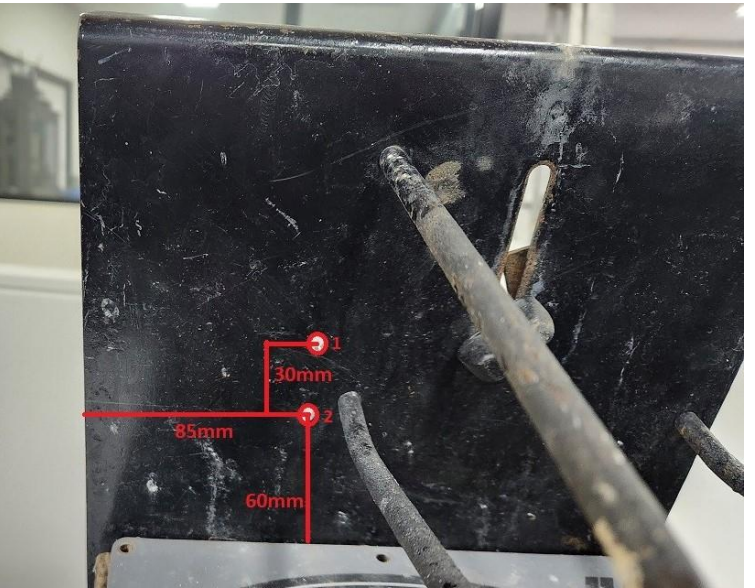
Installation Time

The suggested time required to install the OverWatch is as detailed below


Task	Estimated Time (Minutes)
Open the operator control box	2
Drilling of all mounting holes for the various components	15
Mechanical assembly	10
Electrical assembly	15
Post installation system tests	10
Close the operator control box	3
Total	55

Installation Instructions


Operator Sensor

Step	Description	Diagram
1.	Remove the front panel from the joystick enclosure.	
2.	Drill two 5mm holes to install the operator sensor mounting bracket as shown in the image. The distance between the two holes is 30mm .	


3. Drill one **5mm** hole to install the P-clip as shown in the image.

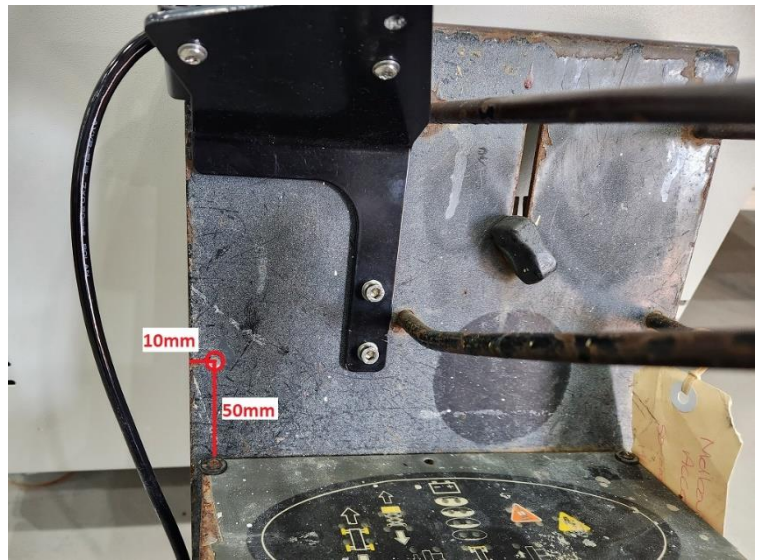

4. Drill two **5mm** holes which are 65mm apart to install the OverWatch ECU. Drill one more **5mm** hole to install another P-clip.

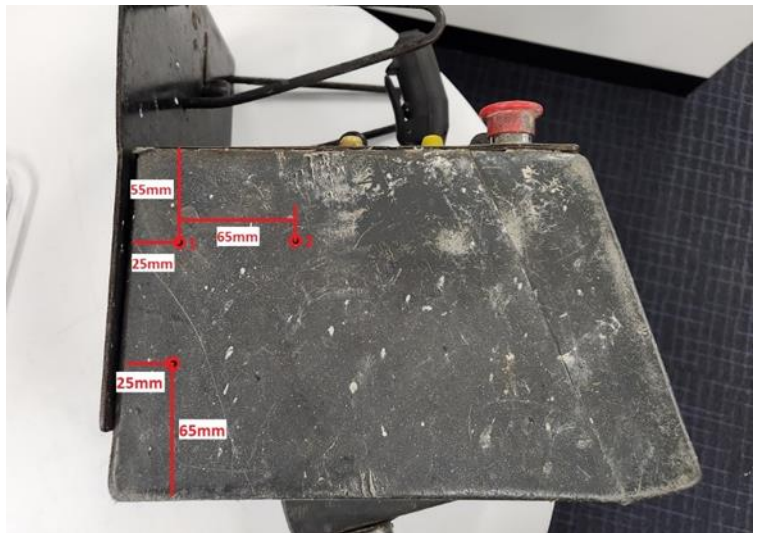

5. Drill a **20mm** hole to install the operator sensor cable gland as shown in the image.

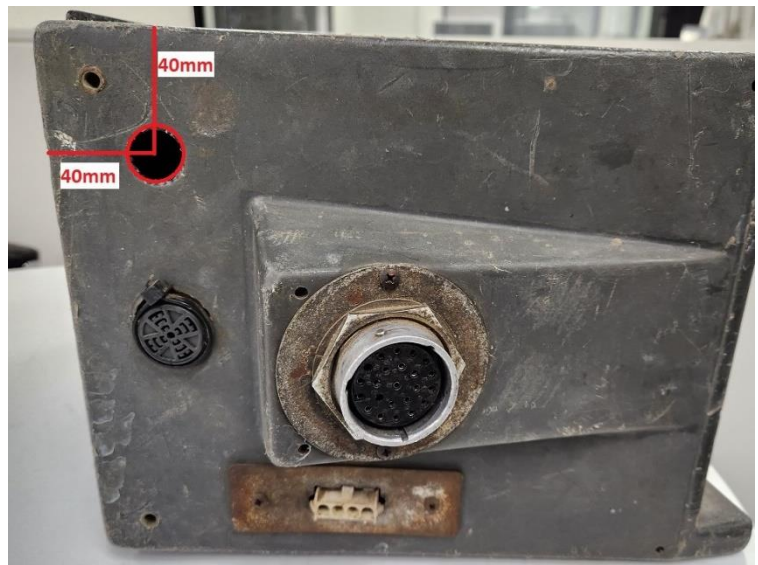

6. Mount the bracket in the located position by using M5 washers, nuts, and socket-head bolts.



7. **Sensor Mounting Guard V1 (ME001794)**

Mount the operator sensor to the bracket (ME001834) by using M4 washers and security bolts.

Secure the operator sensor cable by using a P-clip.


Note: Use highlighted holes are used to position the Operator Sensor.



8. **Sensor Mounting Guard V2 (AS002326)**


This guard (AS002326) supersedes the original V1 design. Mount the operator sensor on the mounting bracket (ME001834) using the M5 washers and nuts. Make sure that the sensor is on the **0.0-degree angle**, such that it is **not** twisted away from the joystick.

The 0.0-degree angle is achieved by using the bolt hole as show in the image.


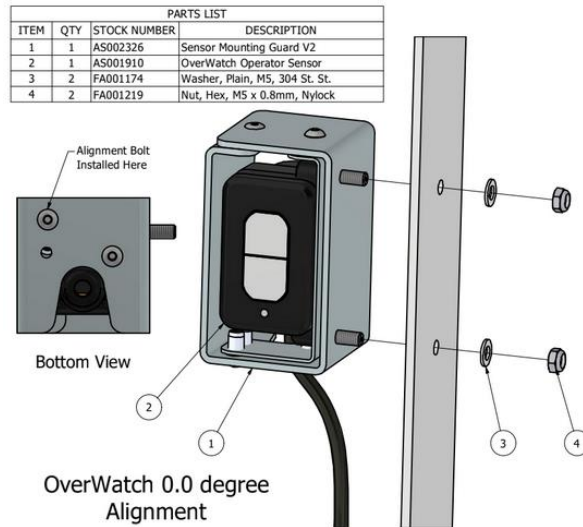


9. Install the operator sensor cable gland and run the cable from the operator sensor into the enclosure.

Use the P-clip to secure the Operator Sensor cable.

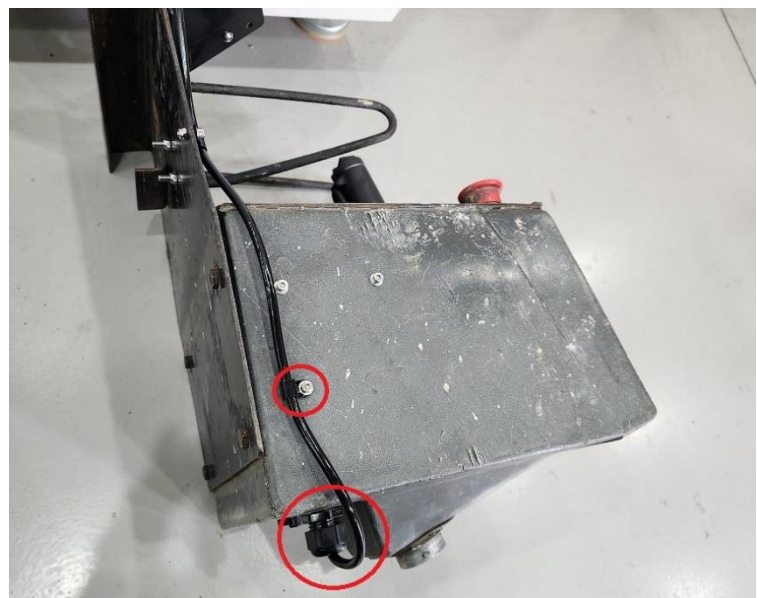


Control Module

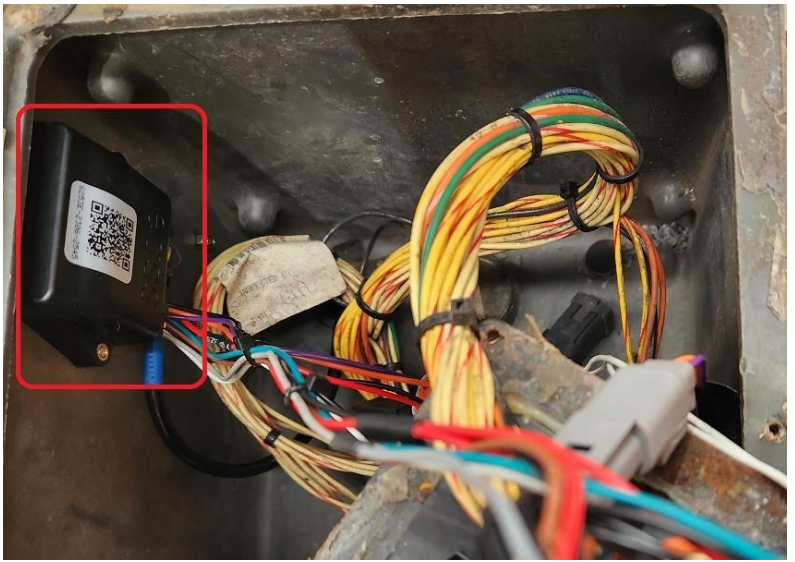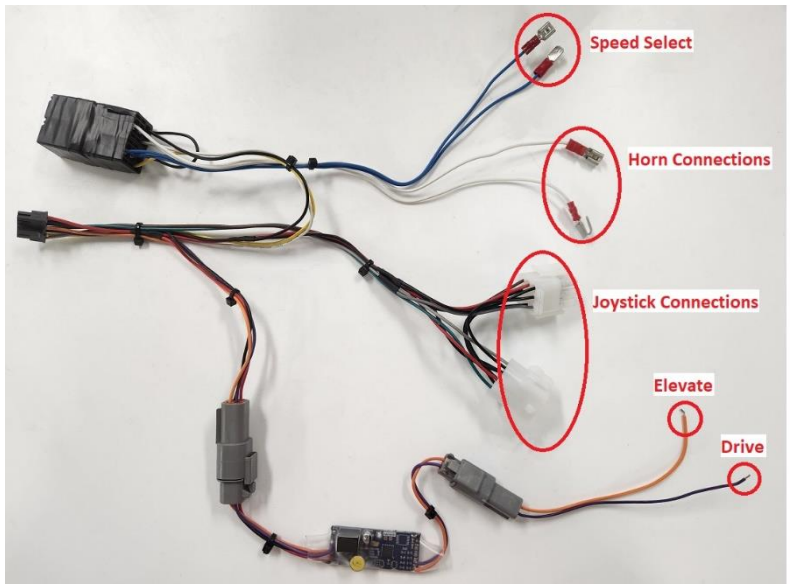Step	Description	Diagram
1.	Mount the ECU inside the enclosure by using M4 screws and washers.	
2.	Wiring connections are made with the OverWatch AS002318 harness.	


3. **Joystick and power:**

Disconnect the 9-pin connectors from the joystick and install the OverWatch joystick connectors in between as shown in the image.

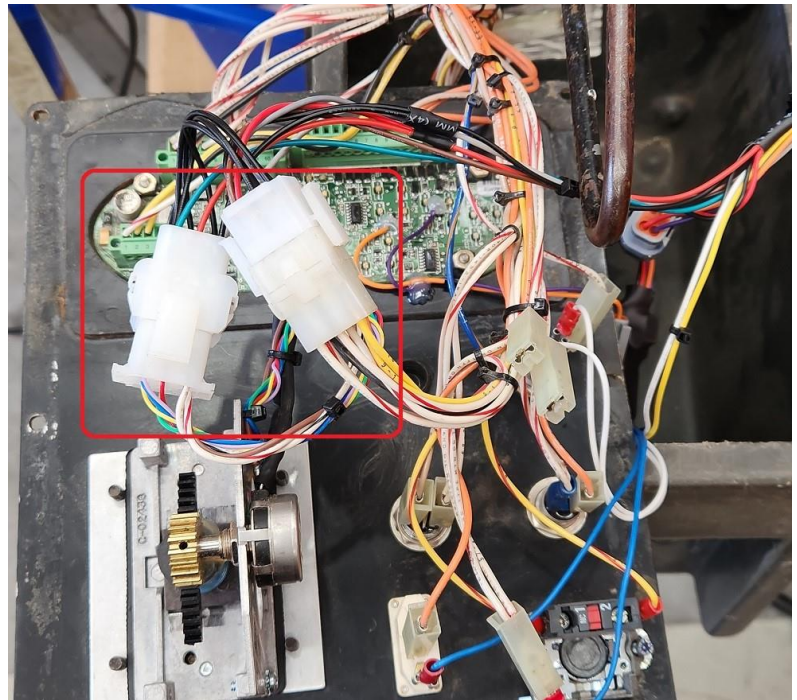


4. **Horn:**

At the back of the horn push button, disconnect the existing horn connectors and install the OverWatch harness horn connectors in between.

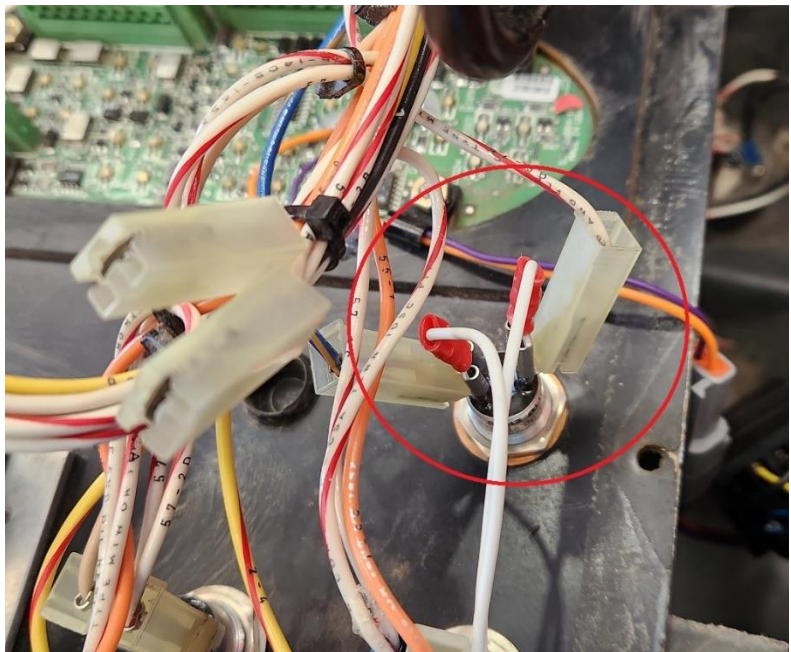

5. **Speed Select:**

At the back of the Speed Select switch, remove wire 57-2 (WHT/RED) and install OverWatch speed select connectors in-between the removed wire (57-2) and the switch as shown in the image.


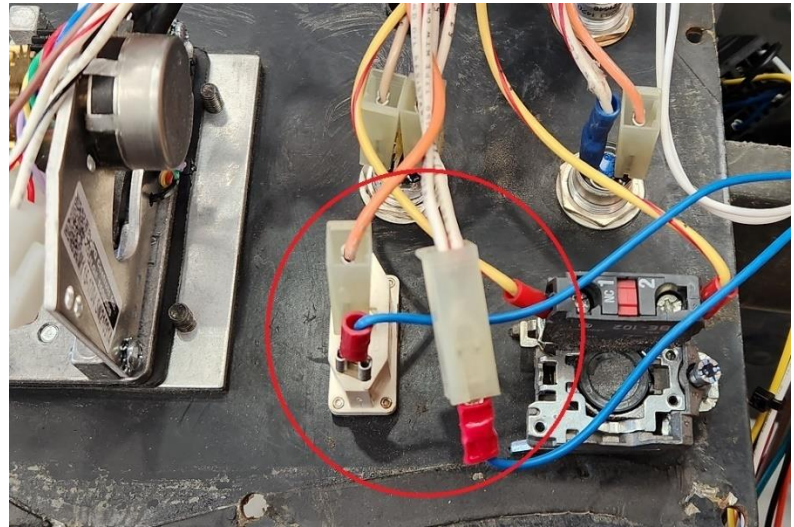


6. **Drive Select:**

At the back the LED circuit panel solder the **purple** drive select wire to the location as shown in the image.


Note: Use a P-clip to secure both drive and elevate signal wires before soldering.

Refer to the schematic drawing which shows a general overview of the connection into the circuit.

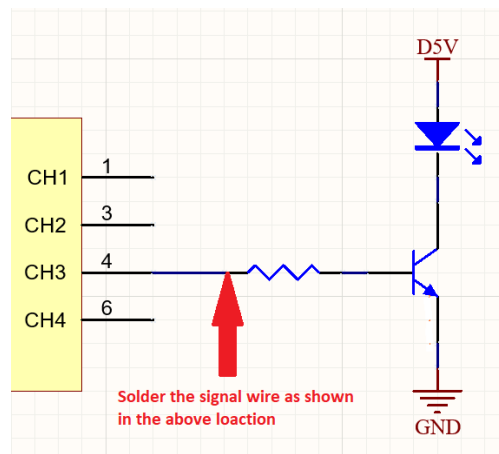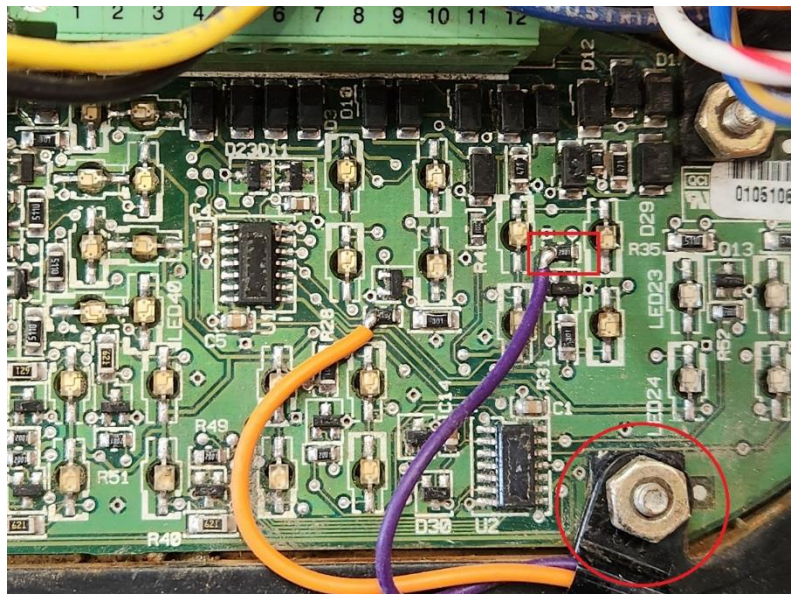


7. **Elevate Select:**

At the back the LED circuit panel solder the orange elevate select wire to the location as shown in the image.

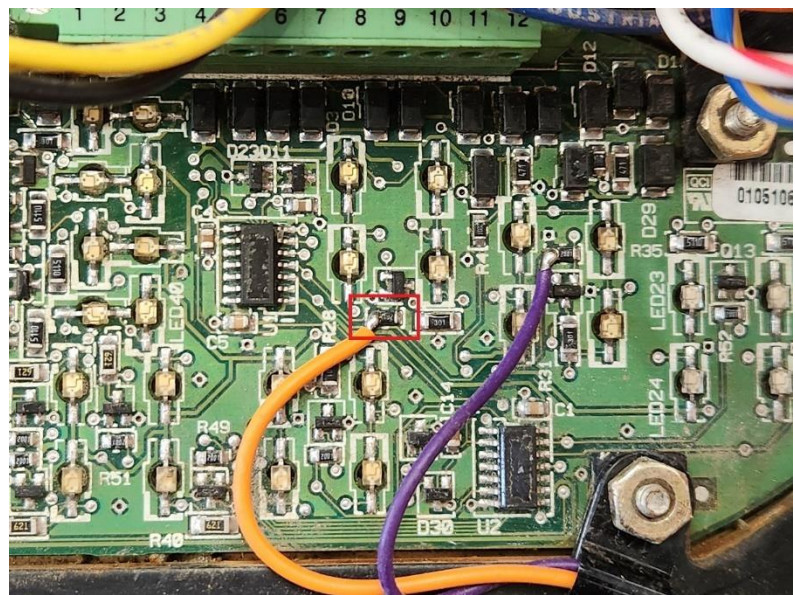




Refer to the schematic drawing which shows a general overview of the connection into the circuit.

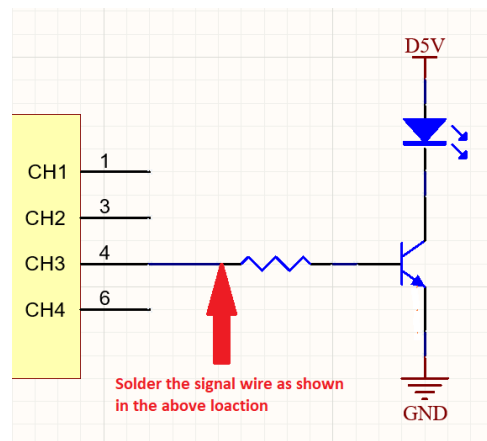

8. **Secure all the soldering joints with hot glue to avoid any damages to the LED circuit panel.**

Wires must be secured with the P-Clip so there are no forces on the solder joints.

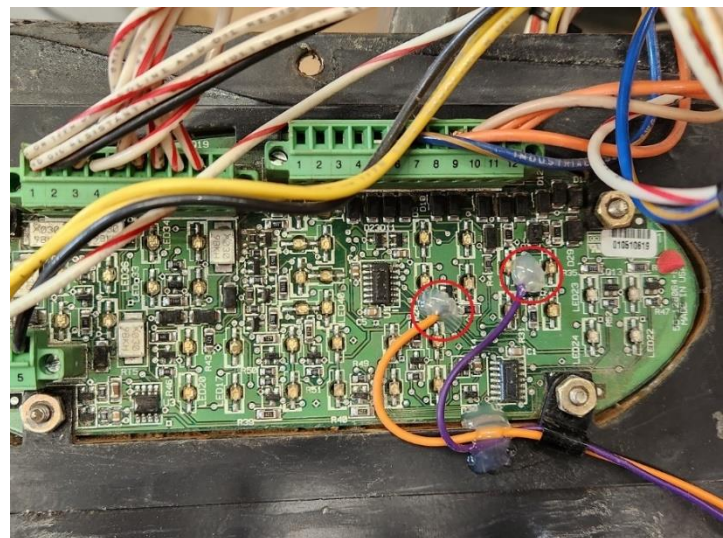

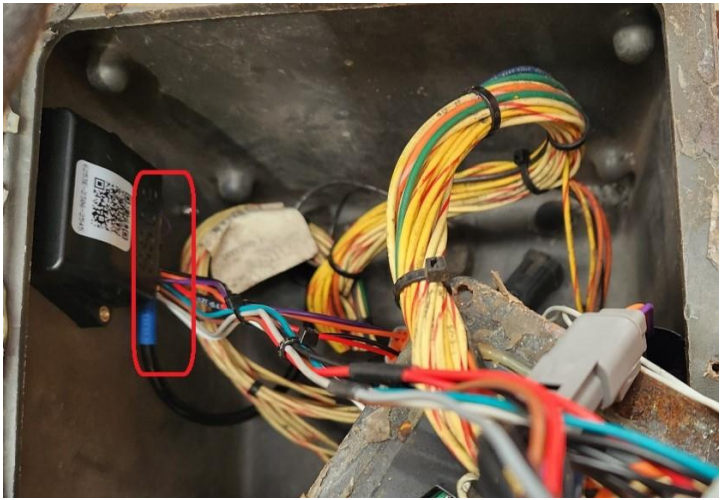9.	Connect the 8-pin connector from the Operator Sensor and the 12-pin connector from the OverWatch harness, into the ECU module.	
10.	Re-assemble the joystick panel back into the control box enclosure.	

Post Installation Configuration

Overview

After the system has been installed it must be configured with the parameters to suit the machine. Follow the instructions below to configure the OverWatch.

Minimum system requirements

Any smart phone, tablet or laptop that meets the following requirements:

- The device can connect to a Wi-Fi access point
- The device has an up to date web browser installed. Firefox, Chrome or Safari are recommended.

Wi-Fi Connection & Web Page Access

To enable the Wi-Fi connection on the OverWatch to complete the configuration follow the steps below.

1. Power down the platform control box with the ESTOP
2. Wait 5 seconds
3. Power up the platform control box with the ESTOP
4. While standing **in front of the operator sensor**, switch on the OverWatch
5. As the welcome chime starts to play, cover the sensor. The LED will flash white then black to acknowledge.
6. Remove your hand from the sensor. The LED will flash white then black to acknowledge.
7. After covering then uncovering the sensor this way 2 more times, "Wi-Fi On" will be announced
8. On your Wi-Fi enabled device (laptop, tablet, smartphone, etc), show the available wireless networks
9. Select the wireless network (starts with "overwatch") to connect to the OverWatch
10. When prompted, enter the **password 12345678**
11. Open your preferred web browser (Chrome, Firefox, Safari)
12. Enter the following into the address bar <http://192.168.4.1> to open the OverWatch main page

Machine Model Selection

Follow the instructions below to configure the OverWatch.

1. Select the Setup option
2. If there is a password field at the bottom of the page, follow the instructions in Change Model Configuration to obtain the password and enter the password field
3. Select the EWP Model from the drop-down list and click Set
4. Click on Proceed to test to begin the installation test



OverWatch Setup

JLG Mxx69LE Series ▼

Set


Serial number: 6253E-2001-9999

No control box set.

Proceed to test

Installation Test

After the model configuration has been set or updated an Installation Test must be performed. This will ensure the installation has been correctly performed and the OverWatch is functioning correctly. Follow the instructions on the web page to complete the Installation Test.

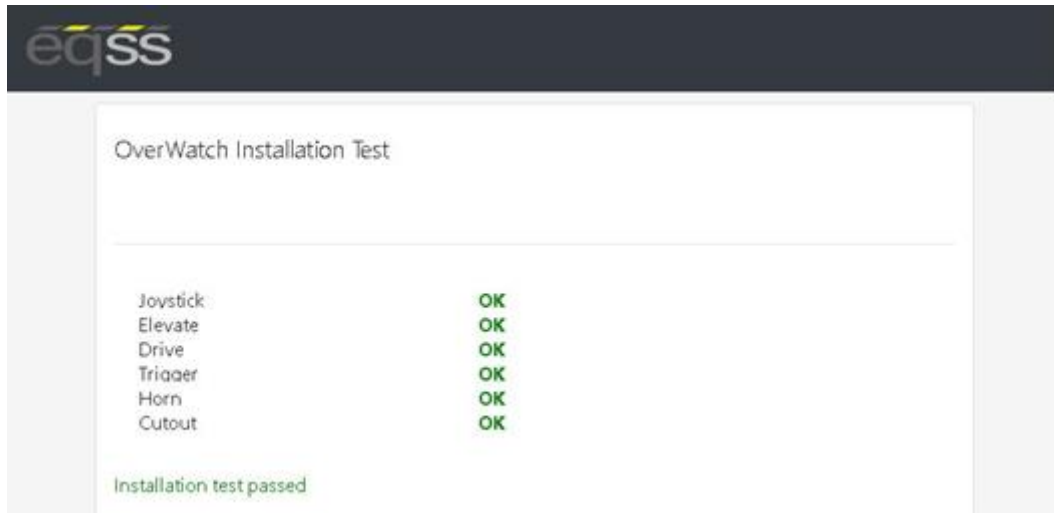

Change Model Configuration

To reconfigure the OverWatch for a different model requires an authorisation password. The authorisation password is generated from the EQSS website. The EQSS website requires a login username and password, contact EQSS for these details.

Follow the instructions below to obtain an authorisation password. It is important to note that each ECU has a unique serial number and a unique password.

1. Open your web browser and enter the following into the address bar <http://www.eqss.com.au/overwatch> to open the Login page
2. Enter your username and password
3. Enter the EUC serial number which is shown on the setup page or on the ECU serial number sticker, also enter the owner and model details of the EWP and then click Generate Hash
4. The generated Hash code or password can be used to change the model configuration.



Details	
Name	John Smith
Email	john.smith@company.com
Phone	+61 9 9999 9999
EQSS Overwatch Serial Number	6253E-2004-0000
Scissor Lift Model	JLG Mxx69LE
Hash	50244

System Settings

Default Parameters

The OverWatch is configured with the following default parameters.


Setting Name	Description	Default
max_safe_velocity	This is the velocity threshold for the cutout in cm/s for drive mode.	100
max_safe_displacement	This is the maximum permitted distance in cm the operator may be away from the calibration position in drive mode.	50
max_safe_velocity_elevate	This is the velocity threshold for the cutout in cm/s for elevate mode.	80
max_safe_displacement_elevate	This is the maximum permitted distance in cm the operator may be away from the calibration position in elevate mode.	50
fwddispadj	The proportion of the calibration distance toward the sensor permitted to the operator.	-0.75
fwdveloadj	The coefficient to apply to the maximum allowable velocity when the movement of the operator is toward the sensor.	1.0
zone_obstruction	If the lidar sensor reading is below this, the lidar is considered to be obstructed (with paint or thick coat of dust) and the system is cutout until the obstruction is cleared.	5
zone_minimum	The minimum calibration distance. If the operator is closer to the sensor than this "operator zone" will be announced.	17
zone_maximum	The maximum calibration distance. If the operator is further from the sensor than this "operator zone" will be announced.	120
adc_elevate_threshold	Threshold value for the elevate ADC input.	500
adc_drive_threshold	Threshold value for the drive ADC input.	500
adc_trigger_threshold	Threshold value for the trigger ADC input.	1000
adc_joystick_fwd_threshold	Forward threshold value for the joystick ADC input.	1100
adc_joystick_bwd_threshold	Backward threshold value for the joystick ADC input.	1400
throttle_time	Period after the trigger is pressed (ms) during which initial velocity reading is computed.	500
driving_state_timeout	Mode selection switch timeout (ms)	7000

Polarity and Input Style

The table below describes each setting

Setting Name	Description	Default
joystick_drive_forward	Direction of joystick to move machine forward	forward
joystick_elevate_upward	Direction of joystick to move machine upwards	forward
elevate_polarity	Direction of signal logic	high
drive_polarity	Direction of signal logic	high
trigger_polarity	Direction of signal logic	high
joystick_polarity	Direction of signal logic	Low
driving_state_input	Direct or timer based	direct

Harness Drawing AS002318

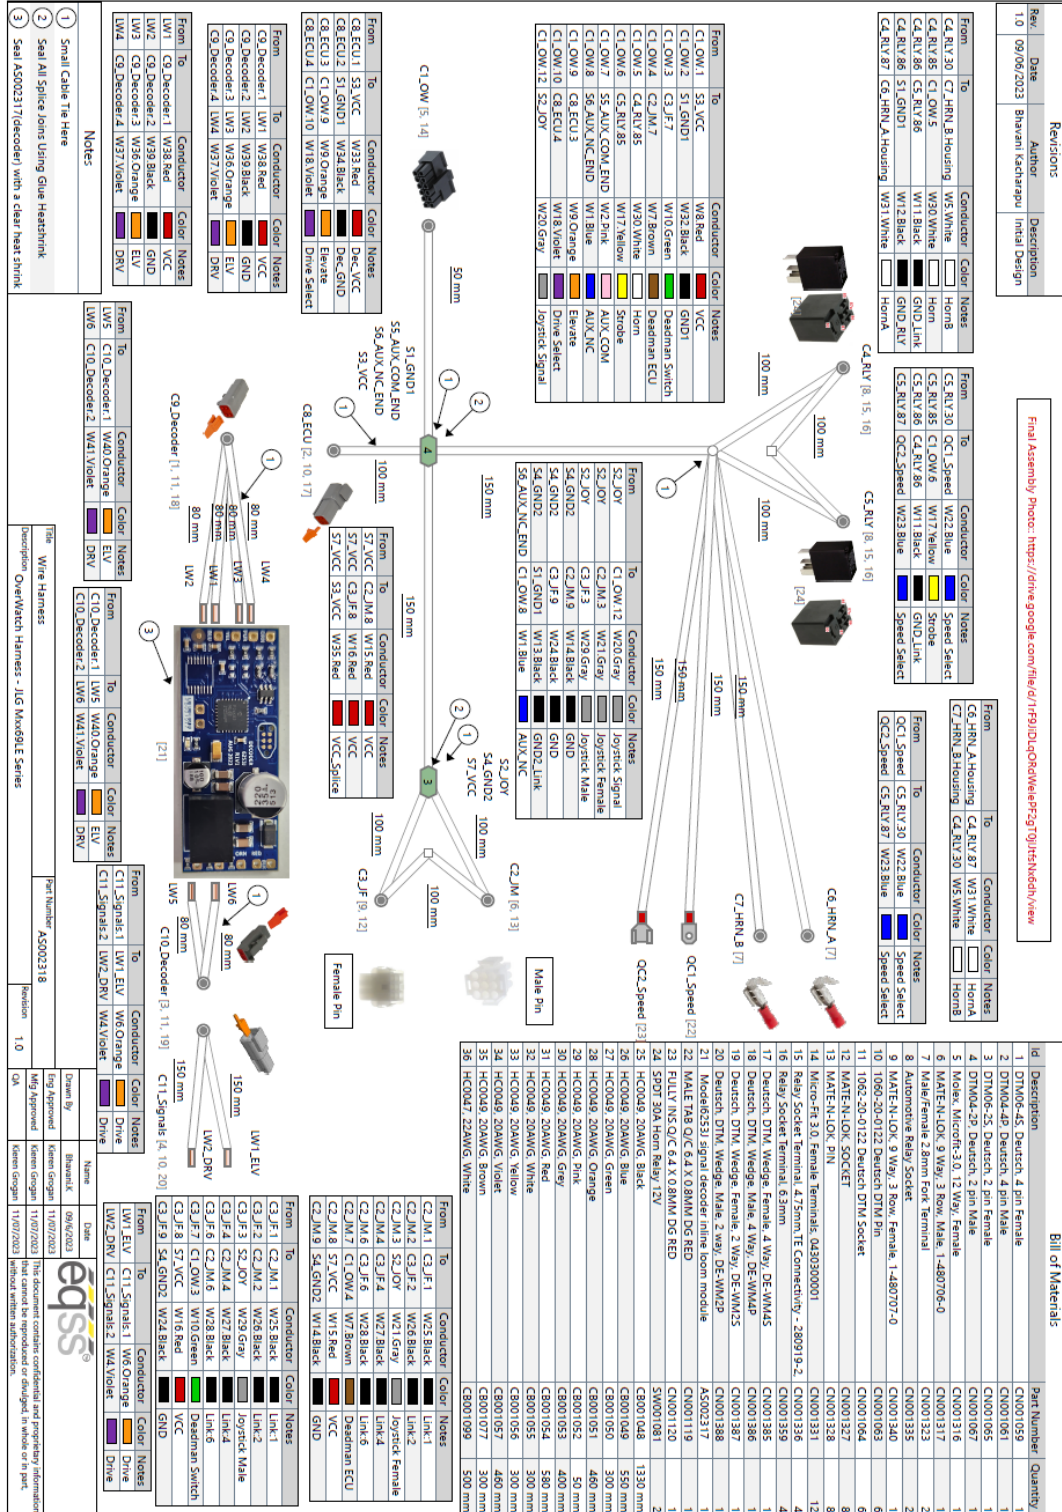

Replacement Parts

Replacement parts for this OverWatch kit are available from EQSS, please email sales@eqss.com.au
Shown below are the part numbers for the major components included in this model specific kit.

Part Number	Description
AS002319	OverWatch - Complete kit JLG Mxx69LE Series
AS001910	OverWatch - Operator Sensor with M20 gland
AS001916	OverWatch - Electronic Control Unit (ECU)
AS002318	OverWatch – JLG Mxx69LE Harness
AS002326	OverWatch - Sensor Guard V2
ME001834	OverWatch – JLG Sensor Mounting Bracket